

Lucas Equine Equipment, Inc.

Fold-Down Blanket Bar Installation Instructions

- Items Included: Fold-Down Blanket Bar
 - 1 Left-Hand Bracket
 - 1 Right-Hand Bracket
 - 4 Screws

Tools Required: • Drill

- #3 Phillips Bit
- 3/16 Masonry Bit (required only for mounting in masonry)

Item Number: 5900-100-FDB

RIGHT HAND

BRACKET

- Marker (required only for mounting in masonry)
- Level (optional)


For Wood or Metal Applications

Note: For wood or metal tube applications, no pre-drilling is required. However, in metal a 1/8-inch pre-drilled hole may make installation easier.

- 1. Locate area for Blanket Bar installation. To center the Blanket Bar within an area, you should mark the center point of the installation area, then measure 16-inches to the left and place a mark to begin installation. Place the left-hand side of the Left-Hand Bracket along the edge of this mark.
- 2. Mount the Left-Hand Bracket (see diagram for help identifying the Left-Hand Bracket from the Right-Hand Bracket) by using your drill and one of the enclosed #14 screws. Do not over tighten. Make sure the bracket is straight and secure.
- 3. Beginning at the outside edge of the Left-Hand Bracket, measure exactly 32 inches to the right. Place a light mark at this point.
- 4. Align the right-hand side of the Right-Hand Bracket with this mark. You may use a level to help ensure the brackets are straight prior to mounting. Secure the Right-Hand Bracket with one of the enclosed #14 screws. Do not over tighten.
- 5. Place the left end of the Blanket Bar in the Left-Hand Bracket. Twist the Right-Hand Bracket slightly if necessary to allow the Blanket Bar to rest in the Right-Hand Bracket.
- 6. Straighten both the Right-Hand and Left-Hand Brackets. Then, secure each bracket with an additional screw.
- 7. Tighten all screws.

For Masonry Applications

- 1. Locate area for blanket bar installation. To center the Blanket Bar within an area, you should mark the center point of the installation area, then measure 16-inches to the left and place a mark to begin installation of the Left-Hand Bracket.
- 2. Clearly mark the two screw holes for the Left-Hand Bracket (see diagram for help identifying the Left-Hand Bracket from the Right-Hand Bracket) by aligning the Left-Hand Bracket with the left-hand mark made in Step 1.
- 3. Using a 3/16 masonry drill bit, pre-drill holes in the two screw locations you just marked.
- 4. Align Left-Hand Bracket with these two holes and mount using two of the enclosed #14 screws, making sure bracket is straight and secure.
- 5. Beginning at the outside edge of the Left-Hand Bracket, measure exactly 32 inches to the right. Place a light mark at this point.
- 6. Align the right-hand side of the Right-Hand Bracket with this mark. You may use a level to help ensure the brackets are straight prior to mounting.
- 7. After aligning the bracket, clearly mark the two screw holes for the Right-Hand Bracket .
- 8. Using a 3/16 masonry drill bit, pre-drill holes in the two screw locations you just marked.
- 9. Align Right-Hand Bracket with two holes and mount using one of the enclosed #14 screws.
- 10. Place the left end of the Blanket Bar in the Left-Hand Bracket. Twist Right-Hand Bracket slightly if necessary to allow the Blanket Bar to rest in the Right-Hand Bracket.
- 11. Straighten the Right-Hand Bracket. Then, secure it with an additional screw.
- 12. Tighten all screws.

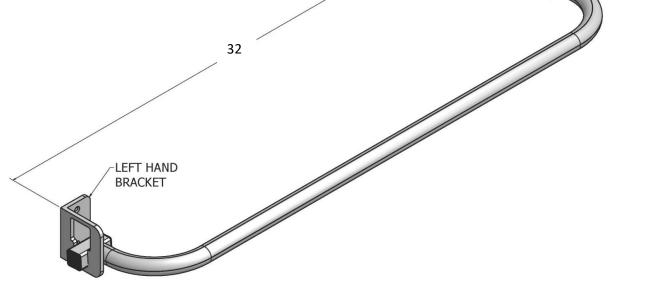

Lucas Equine Equipment, Inc • 4161 US Highway 27 South • P.O. Box 158 • Cynthiana, KY 41031 • 888-577-6920 • info@LucasEquine.com • www.LucasEquine.com